





NOT FOR RECREATIONAL USE - PERSONS SHOULD NEVER RIDE IN THE WAGON

IMPORTANT SAFETY INSTRUCTIONS

- 1. READ ALL INSTRUCTIONS CAREFULLY BEFORE USE.
- 2. Do not load wagon with more than 300kgs.
- 3. Do not allow children to use the wagon unsupervised. This Wagon is not a toy.
- 4. Always distribute payload evenly over surface of bed.
- 5. Do not load any items on top of the fence. Lower fence when objects are to be loaded onto the wagon.
- If any parts become damaged, broken or misplaced do not use the wagon until replacement parts can be obtained.
- Do not operate or use on objects that can cause damage to the pneumatic tires or tubes.Do not inflate tires more than 32 psi.
- 8. SAVE THESE INSTRUCTIONS.

PARTS AND HARDWARE IDENTIFICATION

MAIN FRAME PARTS	
● Bed - (1) — — —	
Side Fences - (2) — -	
■ Back Fence- (1)	
⑤ 10" Wheels - (4) ─ ─	
REAR SUPPORT ASSEMBLY	400
6 Rear Axle Support - (1) —	
Left Rear Axle Brace - (1)	
B Right Rear Axle Brace - (1)	
FRONT SUPPORT ASSEMBLY	
Front Axle Support - (1)	
Front Axle Brace - (1) —	
Pull Handle - (1) — —	
Center Axle Brace - (1) —	
Front Wheel Support Brace	- (1)
Tarpaulin bag - (1) — —	
Metal Tray - (1) — — — — — — — — — — — — — — — — — — —	
ASSEMBLY HARDWARE	
Fence Assembly Pins - (8	
15 Lock Handles 8mm - (4)	
Washers 8mm - (1) —	- (15) •
Nuts w/Lock Inserts 8mm Pin - (1) — — — —	~
Wheel Nuts - (4) — —	💿
- 10 - 10 - 10 - 10 - 10 - 10 - 10 - 10) O
	20mm - (13)— — — — — — — —
Carriage Support Bolts 8 X	25mm - (1) — — — — — — — —
Pull Handle Bolt 8 X 60mm	- (1) — — — — — —

ASSEMBLY INSTRUCTIONS

Tools required for assembly: Medium size slot screwdriver, 6, 8, and 12mm open end wrench and /or two medium adjustable wrenches.

STEP 1: Open the carton and use the cardboard from the carton as a working surface to keep from scratching or damaging the finish.

STEP 2: Assemble the front support by using

Front Axle Brace - (1)

Center Axle Brace - (1)

(1) Front Wheel Support Brace - (1)


(1) Washers 8mm - (1)

Nuts w/Luck Inserts 8mm - (4)

1 Pins - (1)

Carriage Support Bolts 8 X 20mm - (3)

Carriage Support Bolts 8 X 25mm - (1)

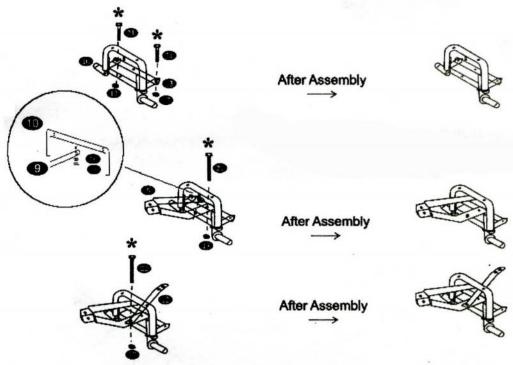

Note: Please do not screw the Bolts and Nuts too tight at this step,


Keep proper Gaps (around 2 ~ 3 mm) for better Turning Around.

STEP 3: Assemble the rear support by using


Part NO. 6 Rear Axle Support - (1)

Left Rear Axle Brace - (1)


Right Rear Axle Brace - (1)




After Assembly




STEP 4: Assemble the Wagon bed 1 to the front support and rear support by using Part NO. 1 Nut w/Lock Inserts 8mm - (10)
Carriage Support Bolts 8 x 20mm - (10)

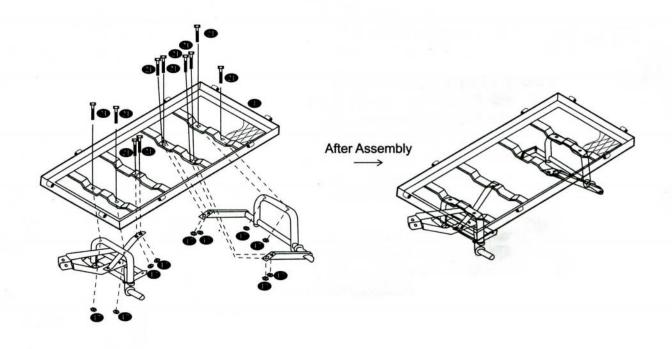

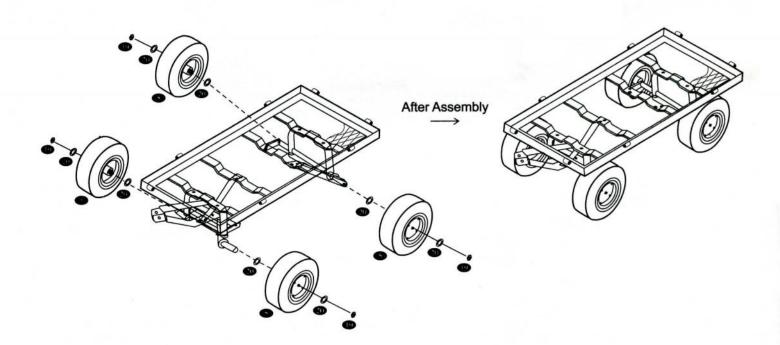


STEP 6: Install the Side Fences ②, Front Fence ③ and Back Fence ④ by using Part NO. ④ Fence Assembly Pins - (8)

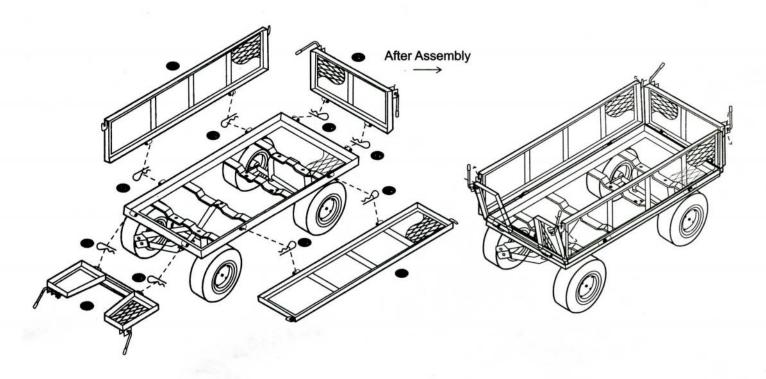

STEP 7: Latch the Fences in the upright position by closing the lock Handles

STEP 8: Install the Pull Handle by using
Part NO. Nuts w/Lock Inserts 8mm - (1)
Pull Handle Bolt 8 x 60mm - (1)

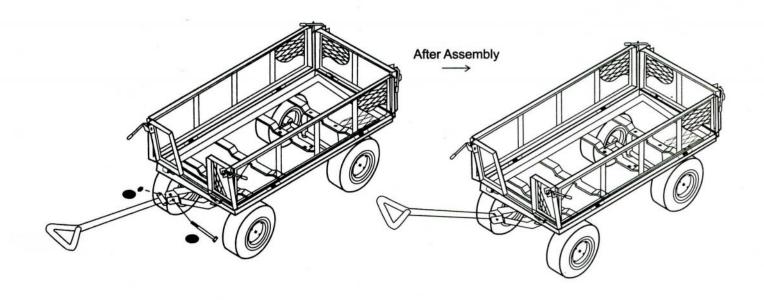

STEP 9: Make sure all bolts and nuts are securely tightened.